




Installation Instructions

Netting for JK 2 door 2007-up
DD-N-JK2-07RS
J2NN07RS**


-Thank you for purchasing a Dirtydog 4x4 netting system. Please read these instructions fully to familiarize yourself with the installation. You should have 3 main pieces. Right side, left side, and backside. Set aside 1 hour for the first time you install your netting. Installation is done easiest with the hard top removed. The soft top can be opened or closed.

Start with installing the short straps that have a female buckle and a metal ring sewn onto it. This strap is installed onto the underside of the tub wall as shown using your factory provided hard top bolts or the ones we have supplied.

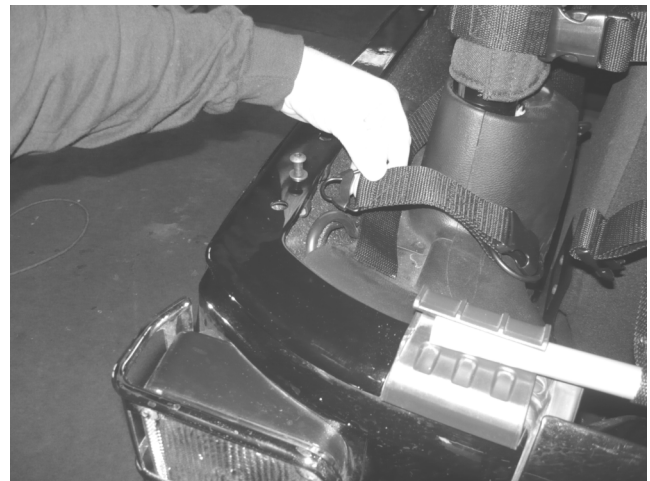


You will first install the back section. Using the position of the dirty dog tag to orient top from bottom. This tag should be readable from the outside. The bottom 4 straps will need male buckles installed on each side. See back page. The bottom male buckle will connect to the straps you have just installed.

Install 3 straps on each side of the roll bar using the 16 inch long webbing straps provided with a female buckle slid on each strap.(Don't worry about tightening them yet. You will need to undo them later to install the sides).

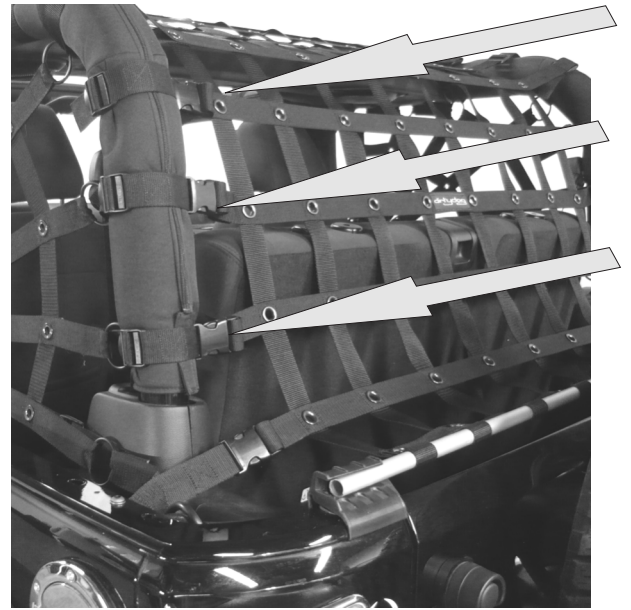


The next three straps heading toward the top can now be installed. They have ladderlocs already sewn into the net. The net is positioned properly when the top strap is installed directly behind the speaker bar. (pictured with standard sides)

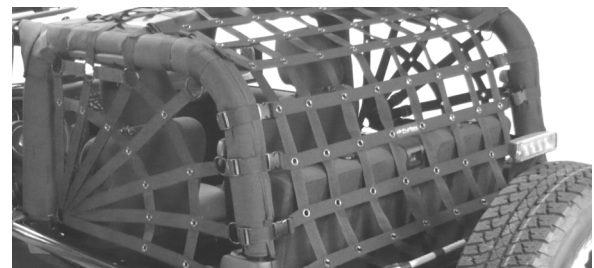

You can now skip the next two straps and go to the final straps at the front corners. These straps wrap over the speaker bar. Wrap the long strap around over the front of the speaker/roll bar and bring under and around up the side and feed into the ladderloc. There will be two ladderlocs. The second one is used for the side strap. See photos next page




Slide each half of the tailgate bar in the last row as shown in the photo. This bar will connect at the center of the net and then the whole bar is clipped into soft-top tailgate clips. (Clips can be purchased from us or your local dealer.) This last row is optional and can be cut off if not needed.

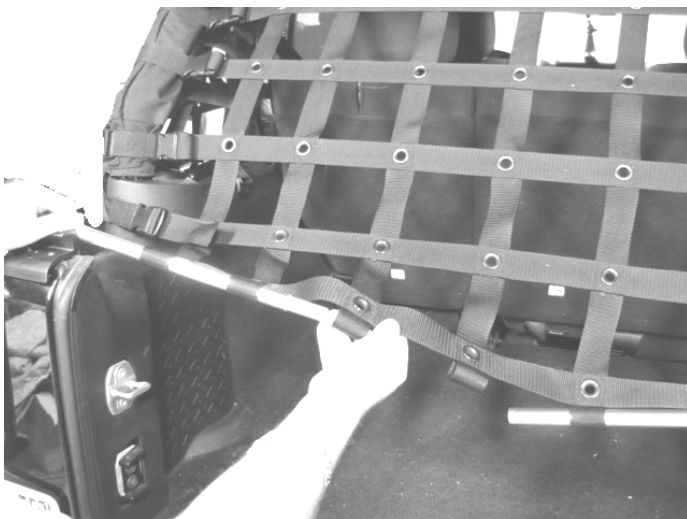

* unlimited model shown in photo


The next step is to install the sides as shown in the photo below. You will need to loosen off 4 of the previously install straps to allow the metal ring of the sides to be installed Arrow 1,2,3 and 4. The ring with the strap (arrow 5) gets installed to the ladderloc at the top net. The final ring (arrow 6) is installed using the long 30" ladderloc strap. This strap wraps around the front of the roll bar to help pull the side forward.

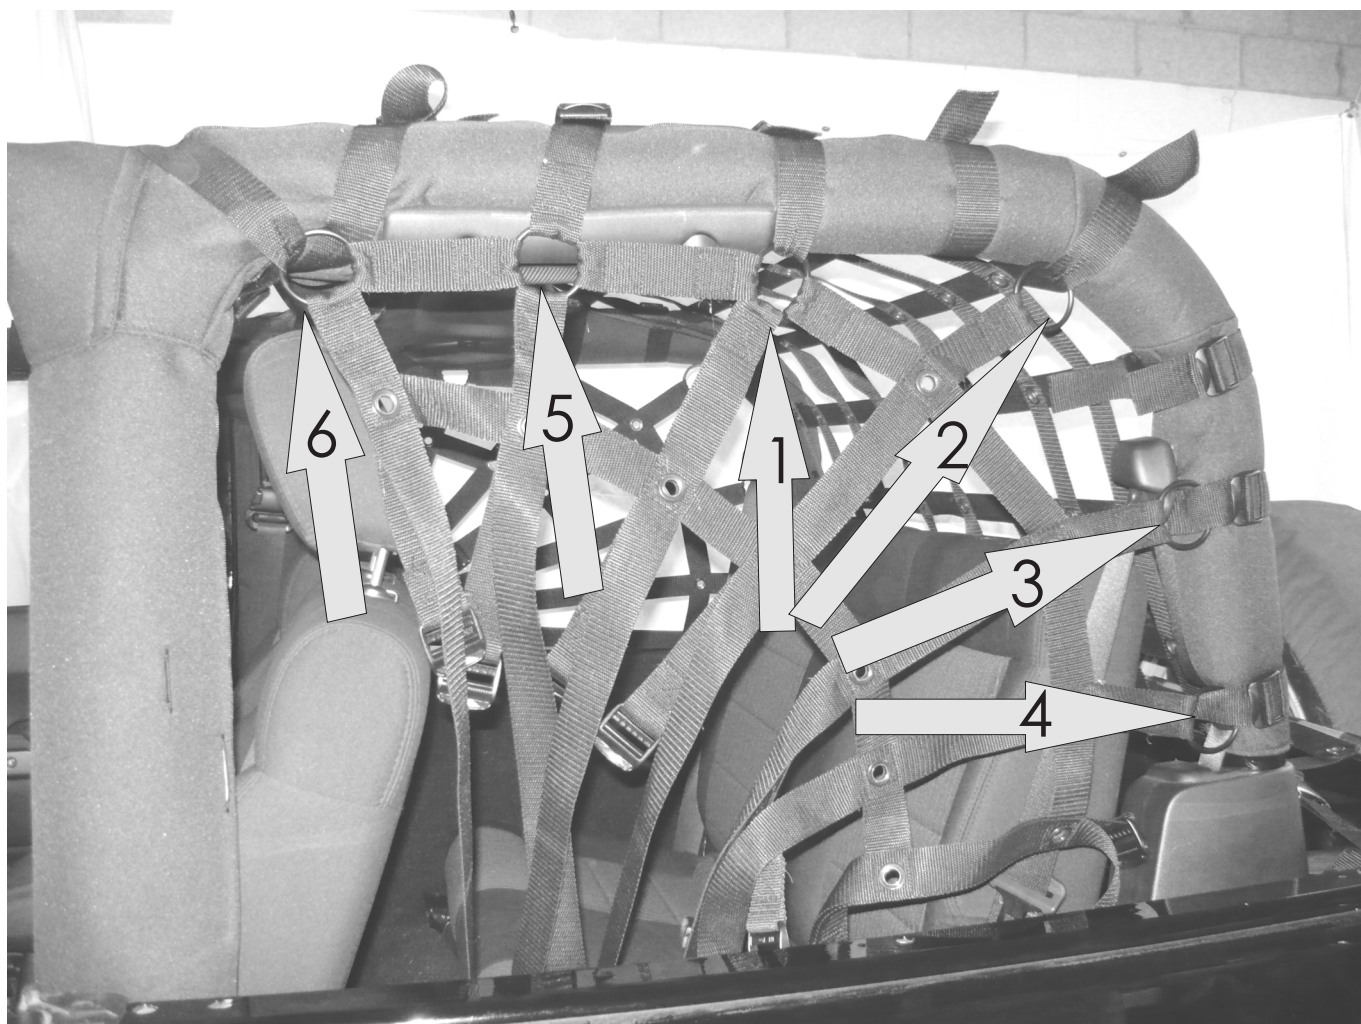

Find the strap that has a metal ring and a plastic loop installed on one end and velcro sewn to the other end. This strap is installed on the roll bar beside the seat. The strap wraps around the roll bar passes through the plastic loop and the velcro hooks onto itself. Be sure that the strap gets pushed below the body side so it falls below the padding of the roll bar. The ring should pull out toward the back .



The straps can now be installed and tighten in the order shown in the photo. Straps 1 and 2 are installed first and pulled evenly and tight. Follow next with 3-6 in order. Strap 5 has to be adjusted at the top as well. After all 6 are installed go through and adjust each one till the side looks uniform. Strap number 7 can now be installed. Both sides need to be attached. The back side uses the loop from the strap that

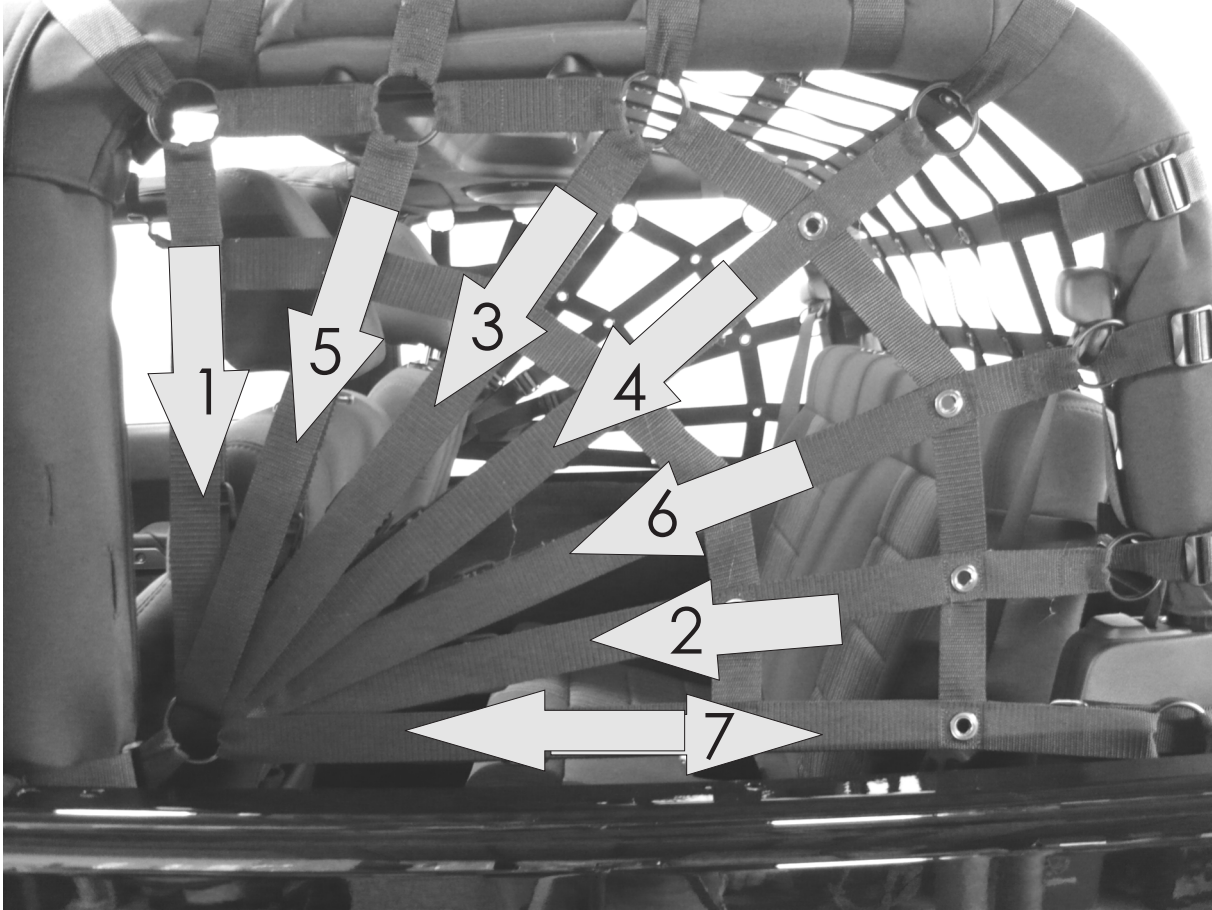

Adjust and tighten straps as needed to even out the net so it is positioned properly. Your net comes with a 3 year warranty against manufacturing defects. Cuts, abrasions, sun faded items are not covered under the warranty.

Dirtydog 4x4
Mississauga, ON
1-855-704-0708
Question? Call or email orderdesk@dirtydog4x4.com

