



Installation Instructions


JK Unlimited Cargo Liner
J4CLWS0714 and J4CLNS0717
fits JK Unlimited 2007-up

-Thank you for purchasing a Dirtydog 4x4 Cargo Liner. Please read these instructions fully to familiarize yourself with the installation. Set aside 15 minutes for the first time you install your cargo liner. This item can be installed with a hard or soft top.

Installing the bolt and d-ring assembly


INSTALLING WITH HARD TOP

Installation with hard top installed: You will need to remove to 6 factory hard top bolts that hold the roof onto the body. You will replace the bolts with the ones provided. Take a look at the photo at the right to see which washers you will be using.

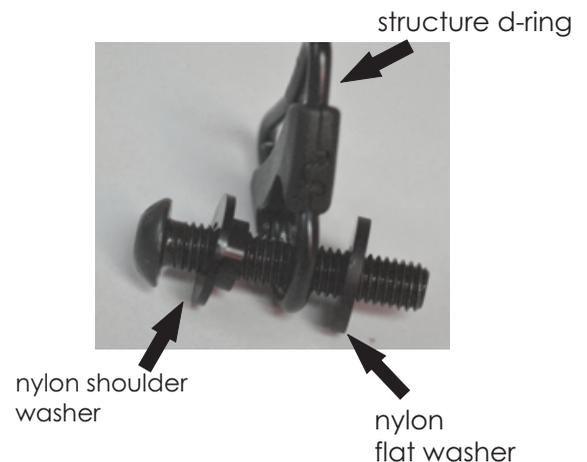


INSTALLING WITH SOFT TOP


Installation with soft top installed. Install the bolt and washer assembly shown to the right into the 6 holes on the fender. If you have a hard top you can use the existing fixed nuts that are attached to the tub. Non hard top owners will use the metal washer and nut to secure the bolt assembly in place

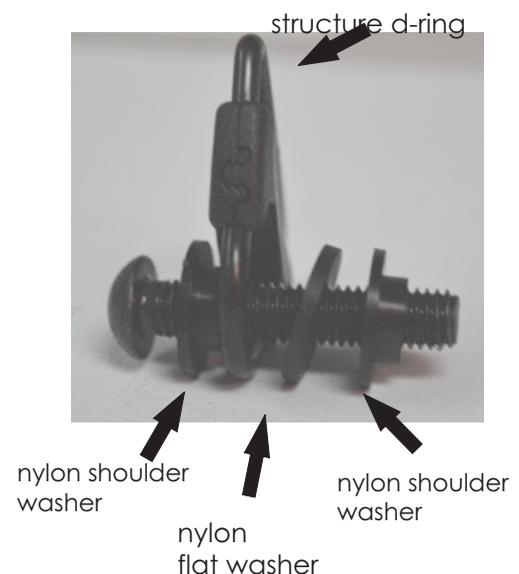

The first step is to insert the 50" aluminum bar in the sleeve at the front end of the cargo liner as shown. As you are inserting the bar through you will see 4 slots cut out along the top of the cargo liner. As you are sliding the bar through at each cut out you will need to install a cam buckle loop in the first cut out then the 28" strap through the second and third slot and then a cam buckle loop on the fourth slot.

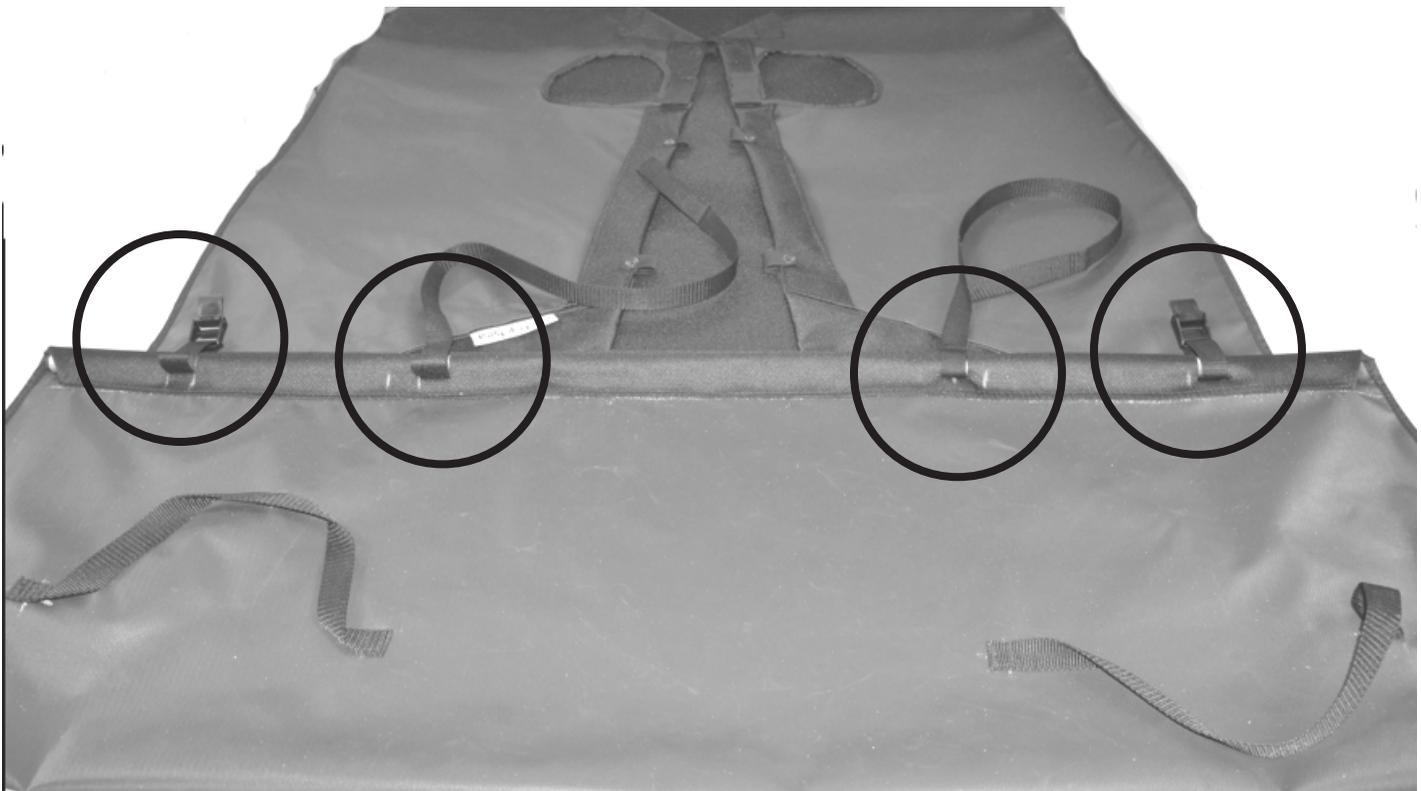


Once the bar is in place you can put the liner in place with the back seats down. (Once this installation is done we will show you how install it with the back seats up.) There are two straps sewn to the back side of the cargo liner. These two straps loop around the rear seat head rest as shown. The two straps around the top go around the front seat head rest and connect to the cam lock.

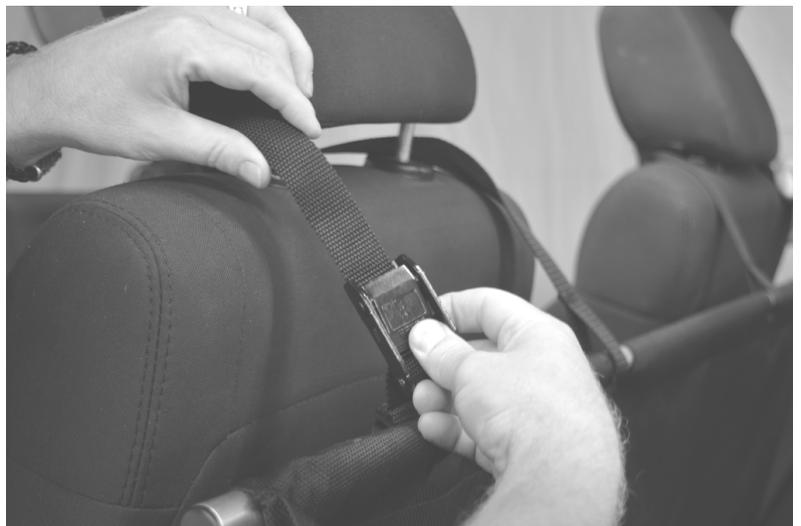

Now you can connect the snaps down the side on to the structure-d-rings you installed earlier. The tail end of the liner should line up with the end of the bed and velcro down to the carpet.



To install the door /bumper protector you must clean the inside door surface first. You will need to stick the 5 adhesive velcro strips to the door as shown. Use the door protector piece to line up where the velcro is positioned. Use the alcohol wipes to clean the area where the adhesive velcro strips will be attached.

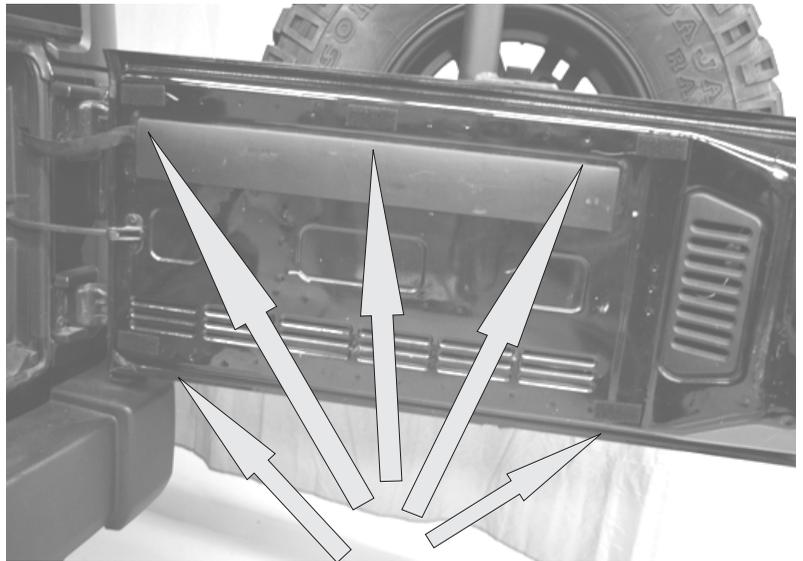

self adhesive velcro



Dirtydog 4x4
2025 Dundas St. E.
Mississauga, ON
Canada
855-704-0708
Question? Call or email orderdesk@dirtydog4x4.com